



Eazy 2 IN 1 VACUUM CLEANER

Warning

1. Ensure sufficient battery charge before wireless use.
2. Start the car first when using the car power (cigarette lighter) mode.
3. For home use, purchase a USB power adapter separately.
4. Do not use at extreme temperatures or pressures (-20°C to +50°C).
5. Keep out of reach of children at all times.
6. Not suitable for wet surfaces — do not absorb liquids.
7. Do not absorb corrosive objects or liquids.
8. Store in a clean, dry environment when not in use.

Product Introduction

- | | |
|------------------------|---------------------|
| 1 Fuselage (Main Body) | 6 Short Tube Nozzle |
| 2 Filter Element | 7 Charging Port |
| 3 Dust Bucket | 8 Power Button |
| 4 Extension Straw | 9 Digital Display |
| 5 Hair Brush Head | 10 Air Outlet |

Parts Included

- USB-C Charging Cable
- Multifunctional Suction Nozzle
- Air Exhaust & Blowing Tube
- Hair Brush Head
- Short Tube Nozzle
- Filter Element (pre-installed)

Parameters

NAME	Power	Voltage	G.W	Dust Cup
Vacuum Cleaner	65W	≤36V DC	~380g	0.4L

Noise: 46dB | Battery: 5,000mAh | Run Time: Up to 3 hrs
Digital Display | Inflatable Function



Installation & Use of Accessories

1. Suction Nozzle — for floors, seats, dashboard, trunk, mattresses, drawers & ashtray.
2. Floor Brush — dual function for dust cleaning on cushions, pads, keyboards & AC outlet surfaces.
3. Blowing Port — for inflating items such as life jackets & air mattresses, and pumping storage bags.

Accessories & Nozzle Types

Mite Removal Brush	Mattresses, sofas, upholstery
Negative Ion Nozzle	Car interiors, air purification
Inverted Floor Brush	Under seats, floor-level gaps
2-in-1 Scrub/Suction	Hard surfaces, stubborn debris
Anti-Static Brush	Electronics, keyboards, screens
Light-Controlled Brush	Dark corners with built-in LED

Disassembly & Cleaning

1. Rotate the Dust Bucket anticlockwise to remove it from the fuselage.
2. Remove the filter screen; pour all collected debris from the dust bin.
3. Clean the dust cup with a damp cloth or disposable towel. The filter screen can be rinsed with water — dry completely before reuse.
4. Re-install the HEPA filter screen into the dust bin and rotate clockwise to lock securely.

Important Notes

- Never cover the air inlet or outlet during operation — risk of overheating.
- Strictly prohibited to use the device while it is charging.
- Do not use for extended continuous periods — suction efficiency will decrease.
- Do not inhale burning or flammable materials (e.g. cigarette ends).
- Do not attempt to disassemble or repair — contact Eazy Living support.

USAGE

Connect the charger to fully charge the battery before first use.

1. Connect the charger — the red LED indicator on the charging line turns ON.
2. Attach the appropriate accessories for your cleaning situation.
3. Turn ON the power switch — the vacuum cleaner will begin working.

Use of Wireless Switch (Battery Mode)

1. Ensure the vacuum cleaner has sufficient battery charge before use.
2. Press the Power Switch 'ON' to begin — the digital display will illuminate.
3. Select the correct nozzle for different surfaces to achieve the best cleaning effect.
4. The filter cover sits in front of the power switch — remove to access and clean the filter net.
5. USB LED shows RED during charging and GREEN when fully charged.
6. Charging time: approx. 3–4 hours. Full charge provides up to 3 hours of continuous use.
7. If the motor alternates fast and slow, charge the battery immediately.

Battery & Charging

Indicator: RED = charging GREEN = fully charged
Charge Time: Approximately 3–4 hours
Run Time: Up to 3 hours continuous use
Low Battery: Motor alternates between fast & slow speed
Important: Switch OFF completely before charging

Eazy Living Co.

www.eazylivingco.store
support@eazylivingco.store
Smart Products · Cleaner Spaces · Easier Living